

MAINTENANCE

Daily - Weekly - Automatic Operation

DAILY

- Make sure the power light is on at all times.
- Remove lid from GRD unit or at external strainer box and **EMPTY STRAINER BASKET DAILY**. This is the most important part of daily maintenance.
- Check GRD for buildup of solids inside retention area.
- Replace lid on GRD (or external strainer box)
- Check collector box daily and empty when necessary.

WEEKLY

- Check GRD retention area for buildup of solids on sides and knock clear.
- Skim solids floating in retention area.
- Stir up retention area and flush cold water into GRD; this will help wash buildup of solids on bottom out of the GRD.
- Remove solids from bottom of retention area and strainer box.
- Clean away build up from tank sides and heating element.

AUTOMATIC OPERATION

As grease builds up in the retention area, the timer will activate, a yellow light will come on and removal of grease to the collector box will be automatic. After cleaning cycle is activated, empty collector box into recycling barrel. The timer in the control box is preset to activate several times a week in the night hours. If grease is not emptying enough you can add events to the timer for night activation on another day of the week to empty more often. If too much water is present in the collector box the number of events can be reduced on the timer. Power should be on at all times to this GRD.

